



IMPORTANT!

REMOVE AND DISCARD ALL MOTOR SHIPPING FOAM FROM BLOWER ASSEMBLY(S) BEFORE WORKSTATION STARTUP ON 3' 4' 5' & 6' UNITS. 6' UNIT HAS TWO MOTORS.!!!

SHIPPING FOAM

BLOWER ASSEMBLY

FOAM IS ACCESSIBLE BY REMOVING WORKSURFACE, BLOWER GUARD, PREFILTER TRAY, AND BLOWER PLENUM FRONT ACCESS PANEL BENEATH BASE PAN.

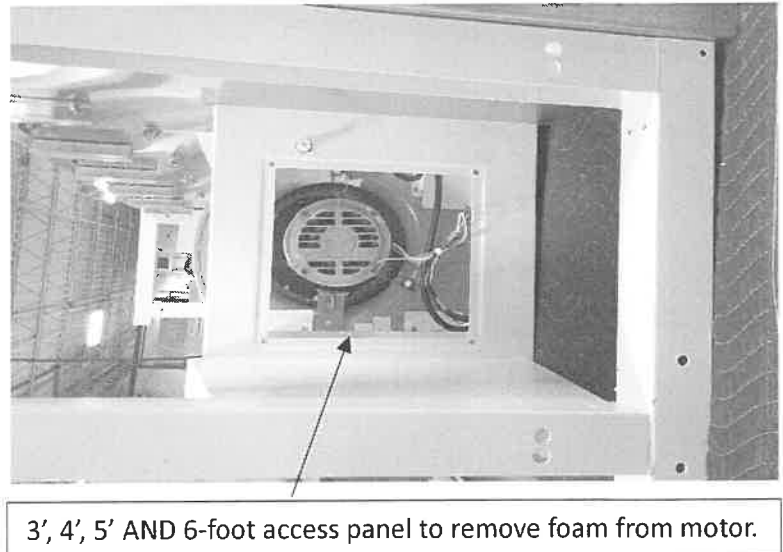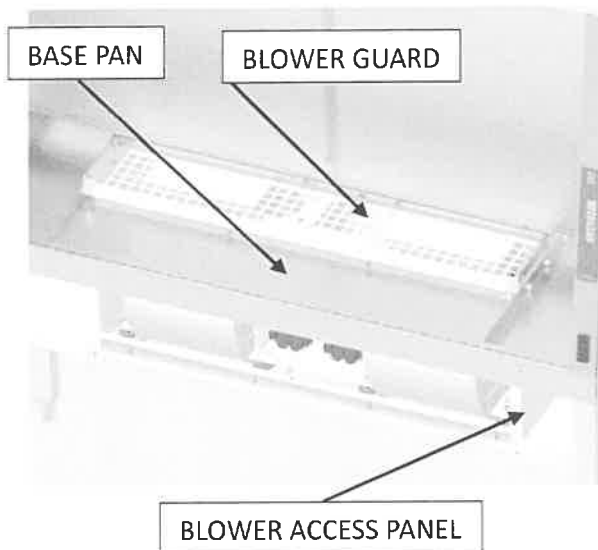

SHOWN WITH WORKSURFACE, PREFILTER TRAY, AND BLOWER PLENUM FRONT ACCESS PANEL REMOVED.

IMPORTANT NOTICE!!!